

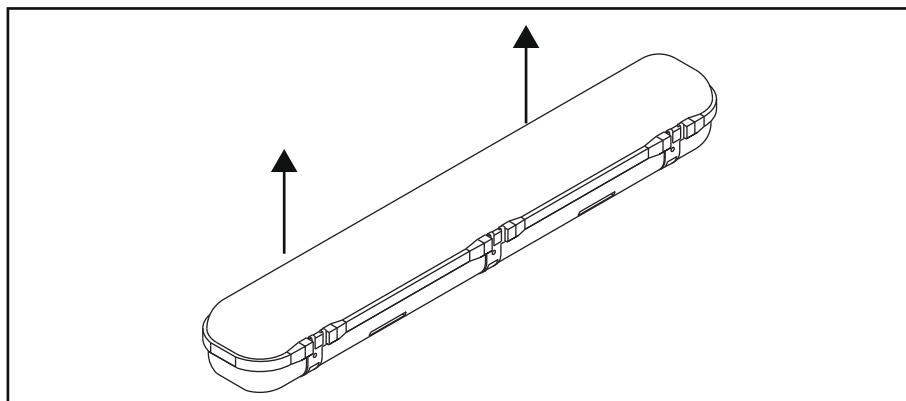


DATE	July 2023	CODE	BTN-IS-1	A
------	-----------	------	----------	---

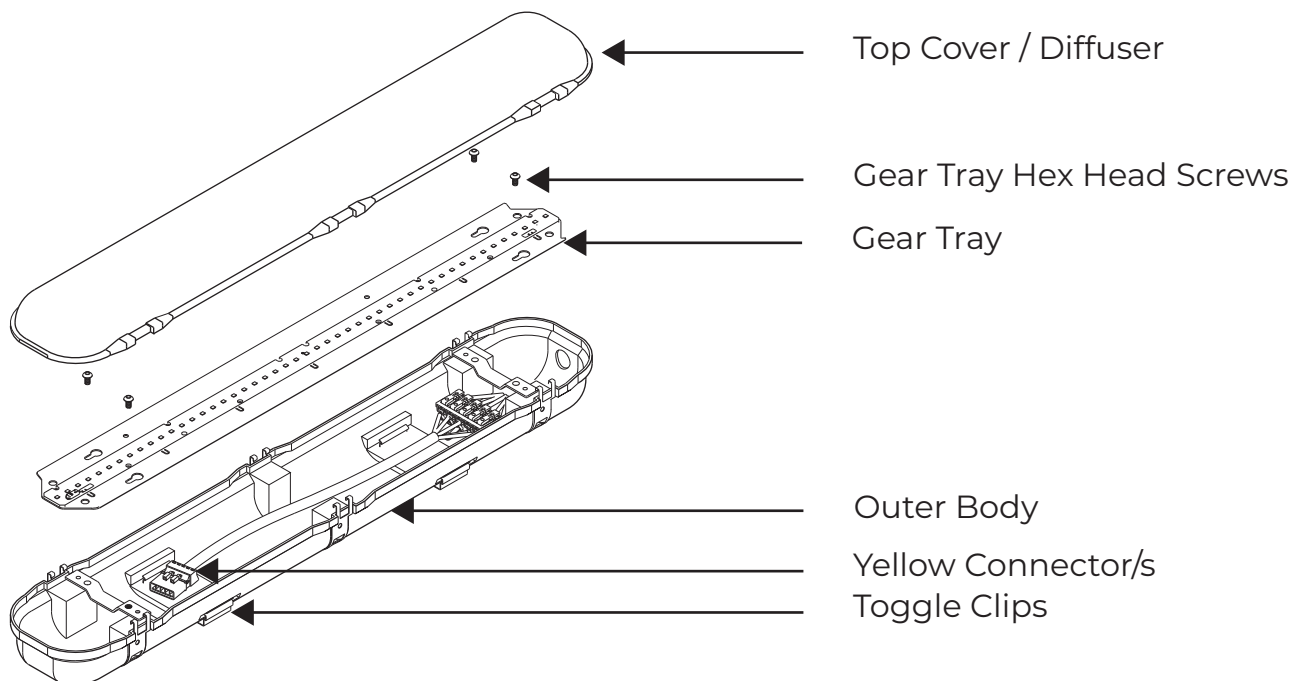


1. Remove the top cover/diffuser by releasing the toggle clips.

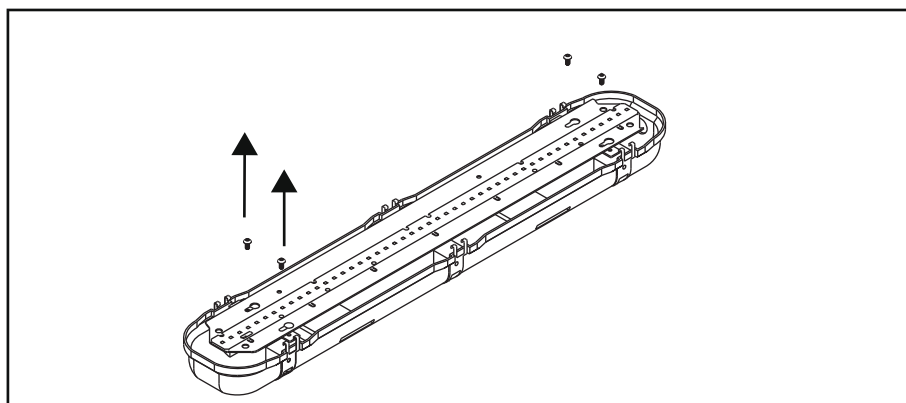


2. Partially loosen the hex head screws, which will allow removal of the gear tray. Unplug the yellow connector/s and put the gear tray carefully to one side.

DATE	July 2023	CODE	<b>BTN-IS-1</b>	<b>A</b>
------	-----------	------	-----------------	----------

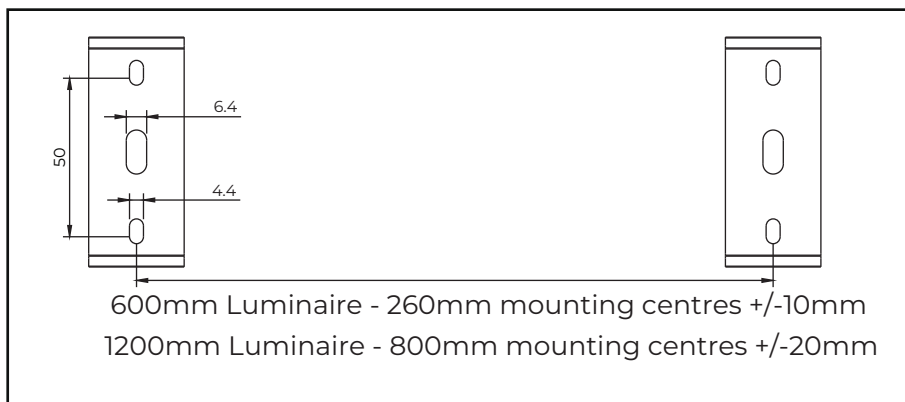

3. Fix the mounting clips with appropriate fasteners to the mounting surface.


Dimensions/mounting centres as illustrated.

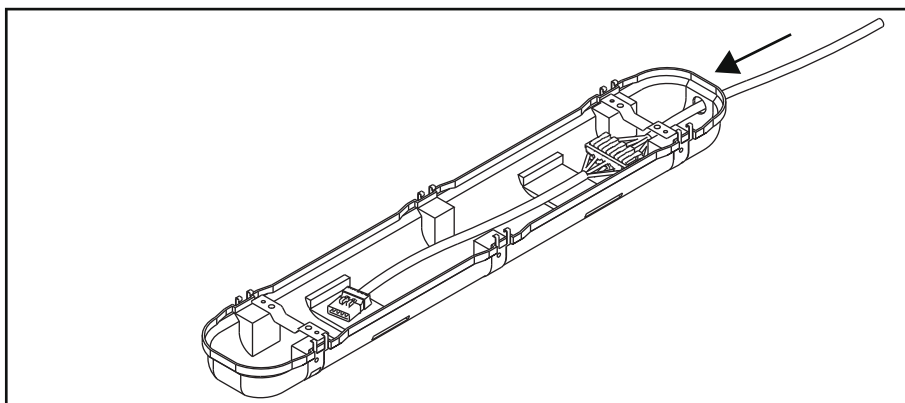

4. Insert mains cable through the M16 cable gland and tighten, to ensure ingress protection is maintained.

Make electrical connections to the terminal block.

Re-attach yellow connector/s, re-attach gear tray and tighten down hex head screws.

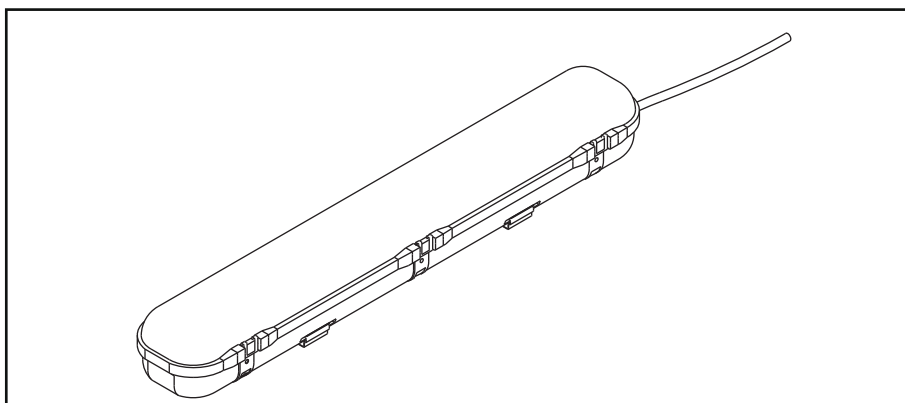

5. Re-attach the top cover/diffuser with the toggle clips.